

Swing-Away Lateral Installation Instructions: MaTRx-PB elite


Instructions for Installing Standard and Offset Swing-Away Lateral Supports:

- 1 Pull up the bottom of the cover (release velcro fasteners) to expose the mounting slots/channels in the back pan.
- 2 Determine the desired mounting height/orientation for the lateral pads (upper or lower mounting slot position).
- 3 Loosely install the lateral supports onto the back pan using the hardware provided. (*Note:* the mounting hardware is typically installed from the outside of the back pan and threaded through the lateral support brackets into the backing plates (x4) -see *Figure 1.0* below; Alternatively, if desired, the mounting hardware may mounted in the reverse orientation- as shown in *Figure 2.0*.
- 4 Adjust laterals to the desired position via the mounting slots on the backpan and via the slots in the lateral support bracket (**Figures 3.0** and **4.0** below). Secure each lateral support into place.
- 5 Re-attach the back cover via the velcro fasteners.

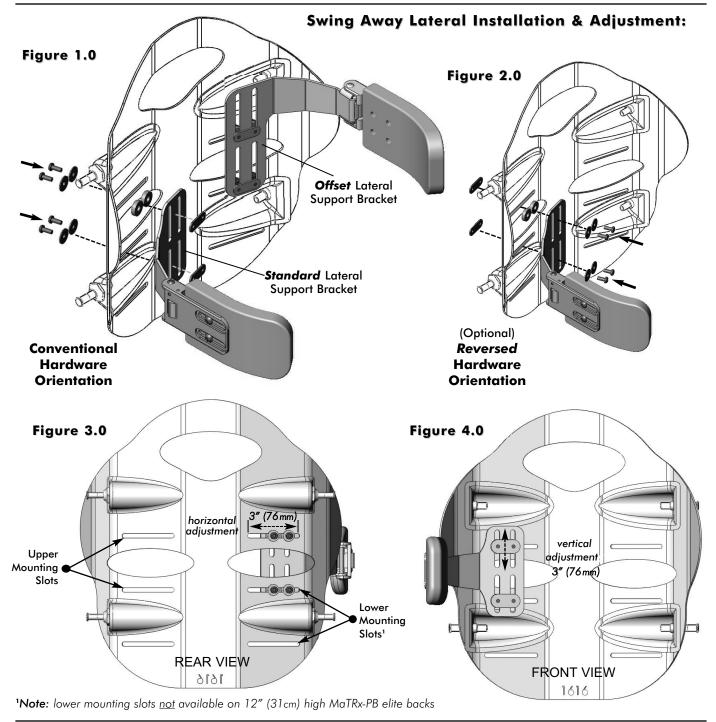



Swing-Away Lateral Support Installation Instructions: MaTRx-PB elite (...cont'd)

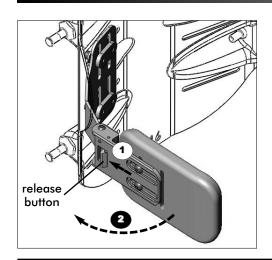

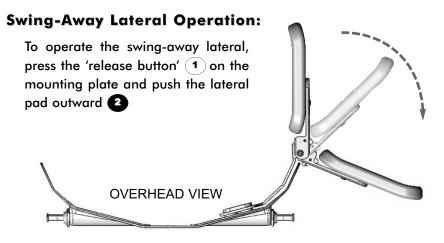


Lateral Pad Options:

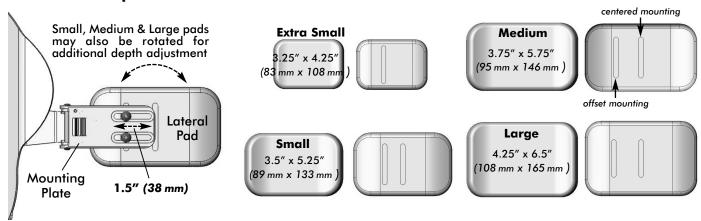

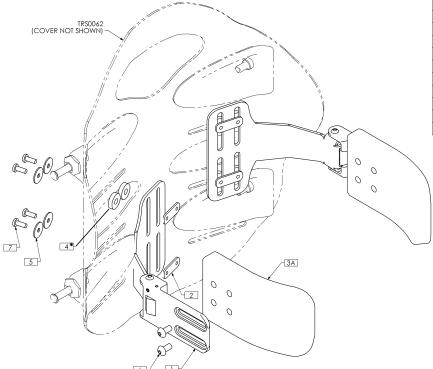



ITEM	NO.	QTY.	PART NO.	DESCRIPTION
1		2	TRC1062	SWING AWAY LATCH
2		4	TRX5556	BACKING PLATE
3/	4	2	TRM0337	PAD, MEDIUM - 3¾" x 5¾"
3B N	۷/S	2	TRM0336	PAD, SMALL - 3½" x 5"
3C I	N/S	2	TRM0338	PAD, LARGE - 41/2" x 61/4"
3D I	N/S	2	TRM0542	PAD, EXTRA SMALL - 3" x 4"
4	*	8	TRM0775	SPACER, 1/4" ID x 3/4" OD x 0.188" THK
5	,	8	TRH0144	3/16" x 3/4"OD x 0.050" TH FLAT WASHER
6		4	TRH0429	1/4-20 x 1/2" BUTTON SOCKET CAP SCREW
7	,	8	TRH0464	#10-32 x 1/3" PAN PHILLIPS MACHINE SCREW

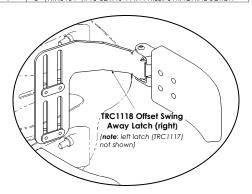

700 Ensminger Rd., Suite 112 Tonawanda, NY 14150 USA 84 Citation Drive, Units 1-7, Concord, ON L4C 3K1 Canada www.motionconcepts.com

