


Swing-Away Lateral Installation Instructions: MaTRx-PB elite

Instructions for Installing Standard and Offset Swing-Away Lateral Supports:

- 1 Pull up the bottom of the cover (release velcro fasteners) to expose the mounting slots/channels in the back pan.
- 2 Determine the desired mounting height/orientation for the lateral pads (upper or lower mounting slot position).
- 3 Loosely install the lateral supports onto the back pan using the hardware provided. (*Note:* the mounting hardware is typically installed from the outside of the back pan and threaded through the lateral support brackets into the backing plates (x4) -see *Figure 1.0* below; Alternatively, if desired, the mounting hardware may mounted in the reverse orientation- as shown in *Figure 2.0*.
- 4 Adjust laterals to the desired position via the mounting slots on the backpan and via the slots in the lateral support bracket (Figures 3.0 and 4.0 below). Secure each lateral support into place.
- 5 Re-attach the back cover via the velcro fasteners.

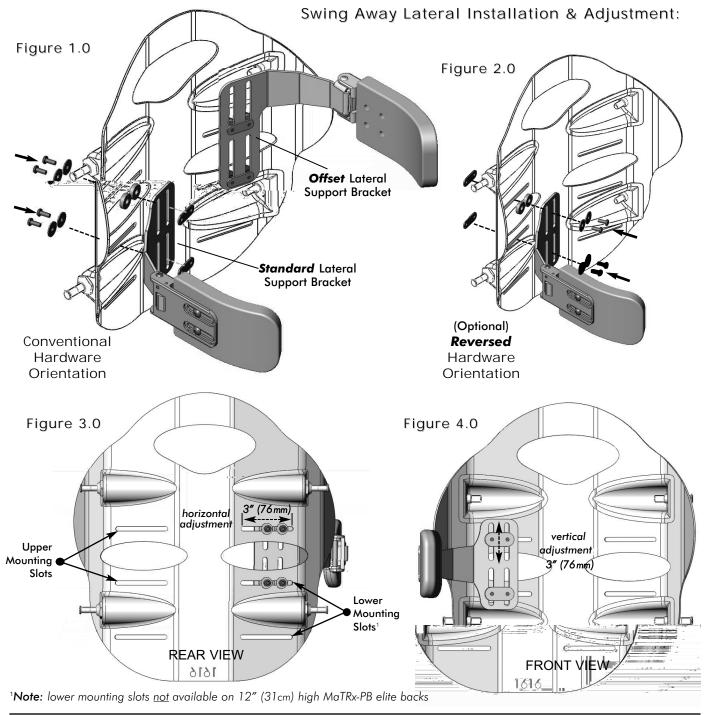


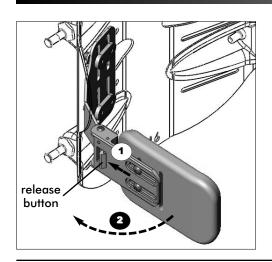

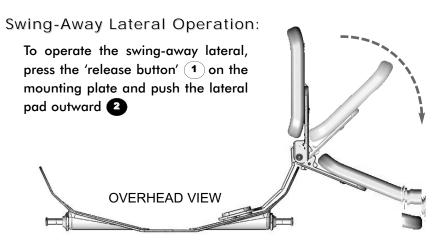


Lateral Pad Options:



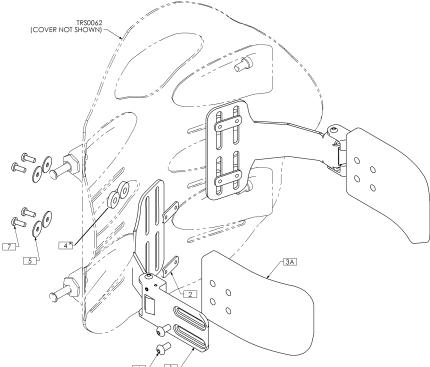



ITEM NO.	QTY.	PART NO.	DESCRIPTION
1	2	TRC1062	SWING AWAY LATCH
2	4	TRX5556	BACKING PLATE
3A	2	TRM0337	PAD, MEDIUM - 3¾" x 5¾"
3B N/S	2	TRM0336	PAD, SMALL - 3½" x 5"
3C N/S	2	TRM0338	PAD, LARGE - 41/2" x 61/4"
3D N/S	2	TRM0542	PAD, EXTRA SMALL - 3" x 4"
4*	8	TRM0775	SPACER, 1/4" ID x 3/4" OD x 0.188" THK
5	8	TRH0144	3/16" x ¾"OD x 0.050" TH FLAT WASHER
6	4	TRH0429	1/4-20 x 1/2" BUTTON SOCKET CAP SCREW
7	8	TRH0464	#10-32 x 1/2" PAN PHILLIPS MACHINE SCREW

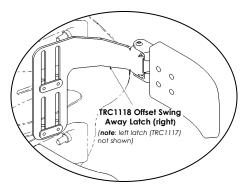

700 Ensminger Rd., Suite 112 Tonawanda, NY 14150 USA 84 Citation Drive, Units 1-7, Concord, ON L4C 3K1 Canada www.motionconcepts.com

